



NOTE: If SIRIUS satellite radio is activated, SIRIUS will automatically update the clock time based on the user settings for Time Zone and Daylight Savings Time. It is necessary to manually change the Time Zone and Daylight Savings Time settings by accessing the SYSTEM SETUP MENU.

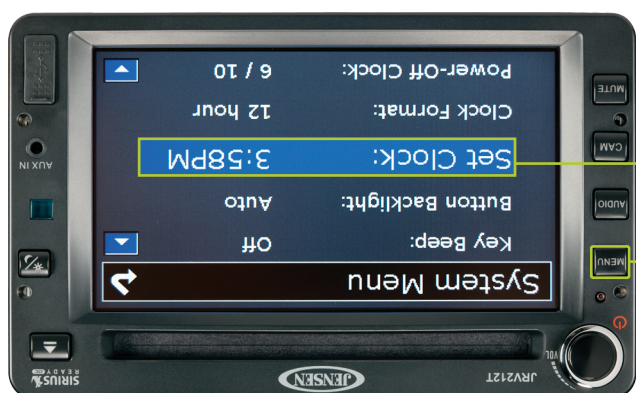

1. Press & hold to access SYSTEM MENU.
2. Use the on-screen arrows to highlight the "Set Clock" option.
3. Touch the "Set Clock" field to view screen.
4. Use the on-screen arrows to adjust the hour.
5. Continue adjusting to move between AM & PM.
6. Touch NEXT button to move to the minutes field.

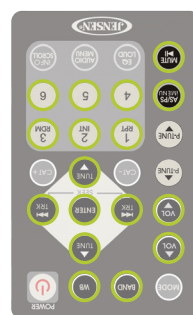

NOTE: Current playing audio will be muted when vehicle is put into reverse and while the rear camera image appears on the screen. Current audio will resume once vehicle is no longer in reverse.



- Touch anywhere on the screen while viewing camera image to display the camera controls.
- LCD SETTINGS: Touch to adjust BRIGHTNESS, CONTRAST, & COLOR settings.

- Touch information bar to remove it from the display. Touch the top of the screen again to make it re-appear.
- AUDIO: Touch to turn camera microphone audio ON or OFF.



JRV212T QUICK REFERENCE GUIDE




- POWER:** Press to turn ON/OFF. Press & hold to turn screen OFF. Touch screen to turn back ON. VOL: Rotate to adjust volume output.
- MENU:** Press to access the SYSTEM MENU.
- AUDIO:** Press to access AUDIO MODE & select a playback source. Press & hold to access AUDIO MENU to adjust Bass, Treble, Balance, Fade and EQ options. Press to return to current playback mode.
- CAM:** Press to access CAMERA mode. Press & hold to access CAMERA SETUP OPTIONS.
- MUTE:** Press to MUTE audio. Press again to restore audio.



- EJECT:** Press to EJECT CD.
- DAY/NIGHT:** Press to switch between DAY or NIGHT dimming levels for display. Press & hold to access DISPLAY SETUP menu to adjust DAY or NIGHT dimming levels.
- AUX IN:** Connect portable audio player.
- USB:** Connect a USB Jump Drive. NOT FOR IPOD CONTROLS.



- Current Preset Group**
- TUNE:** Touch + or - to tune to NEXT or PREVIOUS station.
- SEEK:** Touch + or - to seek to NEXT or PREVIOUS strongest station.
- BAND:** Touch to select preset group FM (18 channel memory locations) or AM (12 channel memory locations).

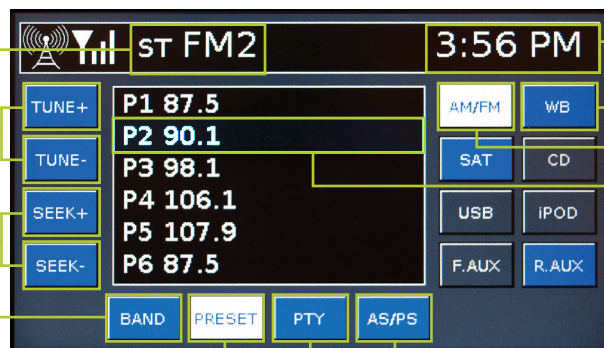

- Current Time**
- WB:** Touch to listen to WEATHERBAND.
- AM/FM:** Touch to access AM/FM Mode.
- Current station:** The currently selected station will be highlighted in blue.

- PRESET:** Touch to display station preset list. Press & hold desired preset number to store current channel playing. Momentarily press to recall stored channel. NOTE: You can store up to 30 channels (18 FM & 12 AM).
- PTY:** Touch to view program type categories list. Touch desired program type and then touch SEEK + or - to start search.
- AS/PS:** Touch to SCAN through currently stored presets. Touch & hold to STORE strongest broadcast stations in your area.

CD/MP3/WMA Controls



Current track playing out of total number of tracks.

RPT: Touch to REPEAT current track. Touch again to REPEAT current folder. Touch again to release function. (For MP3/WMA CDs *only*).


SHUF: Touch to random SHUFFLE all tracks. Touch again to resume play.

INTRO: Touch to preview each song for 10 seconds. Touch again to resume play.

MUTE: Touch to PAUSE audio. Touch again to resume play.

DIRECTORY:

Touch to view the files/folders in the current directory. Use arrow buttons to navigate list of files/folders. Items with a folder icon are folders. Touch to view contents. Use the button to move up a folder level.

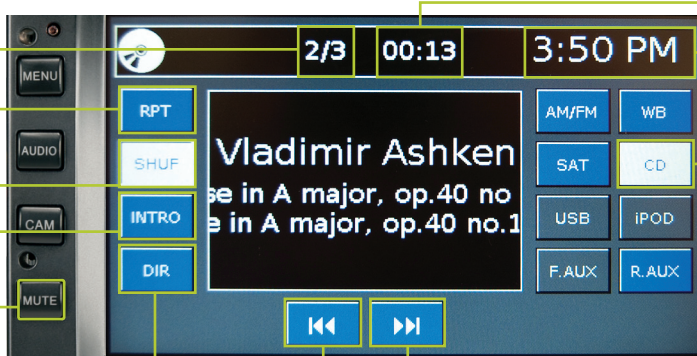

Current track play time.

Current time.

CD: Touch to access CD Mode.

TRACK: Touch to select NEXT or PREVIOUS track. Touch & hold to FASTFORWARD or REWIND current track. Release to resume play.

USB Controls



Current track playing out of total number of tracks.

RPT: Touch to REPEAT current track. Touch again to REPEAT current folder. Touch again to release function. (For MP3/WMA CDs *only*).


SHUF: Touch to random SHUFFLE all tracks. Touch again to SHUFFLE all tracks in current folder (For MP3/WMA CDs *only*). Touch again for normal play.

INTRO: Touch to preview each song for 10 seconds. Touch again to resume play.

MUTE: Touch to PAUSE audio. Touch again to resume play.

DIRECTORY:

Touch to view the files/folders in the current directory. Use arrow buttons to navigate list of files/folders. Items with a folder icon are folders. Touch to view contents. Use the button to move up a folder level.

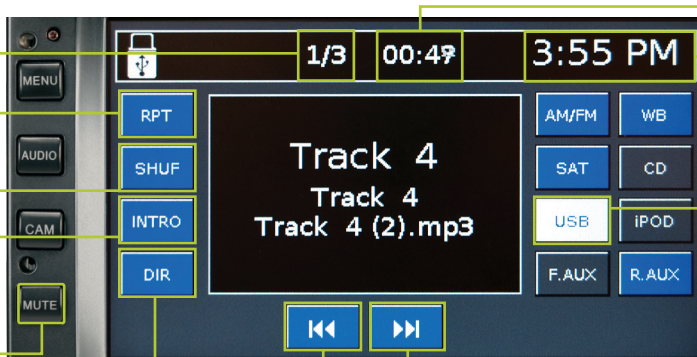

Current track play time.

Current time.

USB: Touch to access USB Mode.

TRACK: Touch to select NEXT or PREVIOUS track. Touch & hold to FASTFORWARD or REWIND current track. Release to resume play.

iPod Controls*



Current track playing out of total number of tracks.

RPT: Touch to REPEAT current track. Touch again to REPEAT current folder. Touch again to release function. (For MP3/WMA CDs *only*).

SHUF: Touch to random SHUFFLE all tracks. Touch again to resume play.

INTRO: Touch to preview each song for 10 seconds. Touch again to resume play.

MUTE: Touch to PAUSE audio. Touch again to resume play.

DIRECTORY:

Touch to view the files/folders in the current directory. Use arrow buttons to navigate list of files/folders. Items with a folder icon are folders. Touch to view contents. Use the button to move up a folder level.



Current track play time.

Current time.

iPOD: Touch to access iPOD Mode.

TRACK: Touch to select NEXT or PREVIOUS track. Touch & hold to FASTFORWARD or REWIND current track. Release to resume play.

SIRIUS Controls*



Current tuned channel number and name.

Signal strength indicator.

TUNE: Touch + or - to TUNE to NEXT or PREVIOUS channel.

CAT: Touch + or - to navigate to NEXT or PREVIOUS category.

DIRECT ENTRY: Touch to access DIRECT CHANNEL ENTRY SCREEN.

DIRECT CHANNEL ENTRY:

1. Enter first digit of channel number.
2. Touch the NEXT button to go to the next digit and repeat.
3. Touch OK to select channel when all three digits have been entered.



Current time.

SAT: Touch to access SAT Mode.

PRESET: Touch to display station preset list. Press & hold desired preset number to store current channel playing. Momentarily press to recall stored channel. You can store up to 6 channels per band (SIR1, SIR2, SIR3).

FAV: While current song is playing, touch "ARTIST" button to save the artist or "SONG" button to save the song to your favorites list.

Activating your SIRIUS® subscription. *Before you can listen to SIRIUS satellite radio, you must subscribe to the service.*

1. With the radio power ON, press the AUDIO button and then touch SAT to enter SIRIUS ready mode. After displaying the SIRIUS logo, the Receiver will update all the SIRIUS channels. NOTE: Don't push any buttons or perform any operations until updating has been completed.
2. Once updated and the SIRIUS channels are received, the display will change to "Call 1-888-539-SIRIUS to subscribe" and will place you in SIRIUS satellerradio's preview channel. Channel 184 is the SIRIUS preview channel. You will not be able to tune to any other SIRIUS radio channels until you activate your subscription.

3. You will need to access your SIRIUS ID, which is displayed on channel 000. Touch the DIRECT ENTRY button on the screen and type in 000 and press OK to enter your selection. This will display your unit's unique 12-digit SIRIUS ID number.
4. Write the SIRIUS ID number down and have your credit card handy.
5. Contact SIRIUS on the Internet: <https://activate.SIRIUSradio.com/> Follow the prompts to activate your subscription. You can also call SIRIUS toll-free at: 1-888-539-SIRIUS (1-888-539-7474)