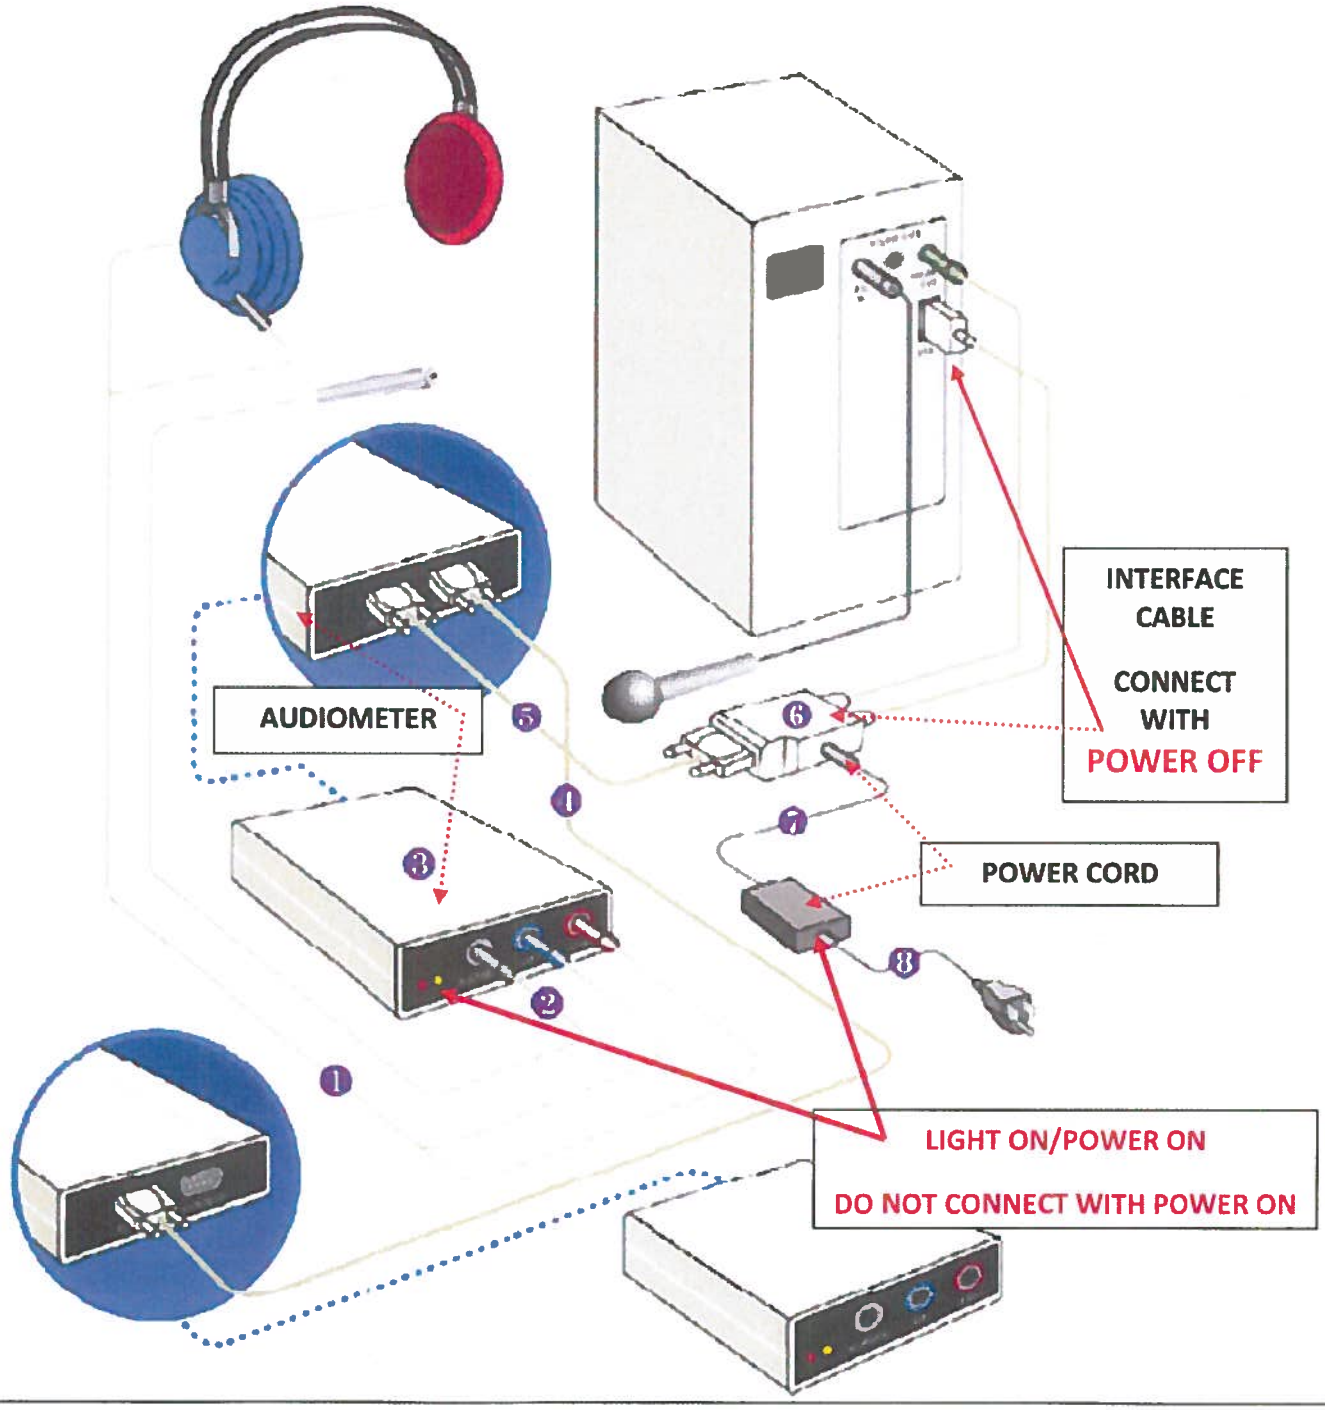

ENSURE POWER TO THE AUDIOMETER IS OFF PRIOR TO CONNECTING OR DISCONNECTING THE INTERFACE CABLE TO/FROM THE COMPUTER